HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
TRIM EMBLEM (DX, LX, EX, V6)	**1999 ACCORD 2- AND 4-DOOR**	**All 20018**
		Issue Date **SEP 1998**

PARTS LIST

Trim emblem

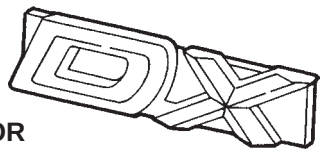

2-DOOR AND 4-DOOR
V6 Gold: P/N 08F20-S87-100
V6 Black Chrome: P/N 08F20-S87-100G

4-DOOR
DX Gold: P/N 08F20-S84-100F
DX Black Chrome: P/N 08F20-S84-100S
LX Gold: P/N 08F20-S84-100G
LX Black Chrome: P/N 08F20-S84-100P
EX Gold: P/N 08F20-S84-100H
EX Black Chrome: P/N 08F20-S84-100T

SUPPLIES REQUIRED

String
Isopropyl alcohol
Shop towel
Masking tape

INSTALLATION

NOTE:
- This trim emblem should be installed only when the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours.

1. To prevent damage to the body finish, attach masking tape around the original emblem.

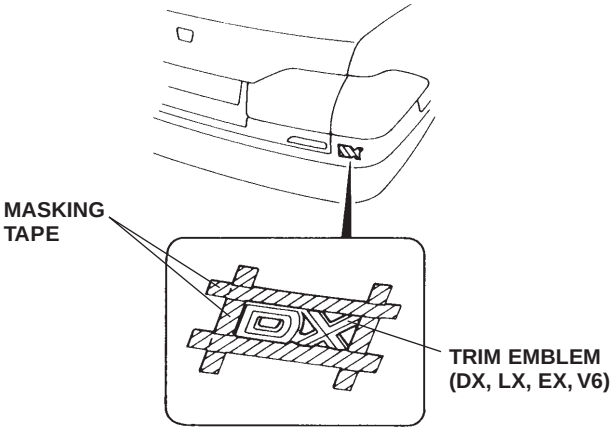

2. Remove the original emblem by cutting the outer edges with a piece of string.

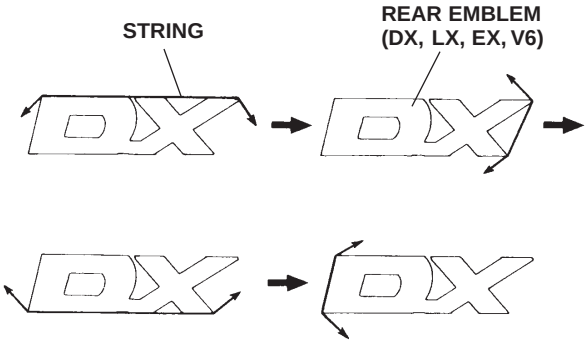

3. Using isopropyl alcohol, clean the area where the emblem was removed.

4. Remove the adhesive backing from the trim emblem, and attach the emblem to the vehicle in the marked area.

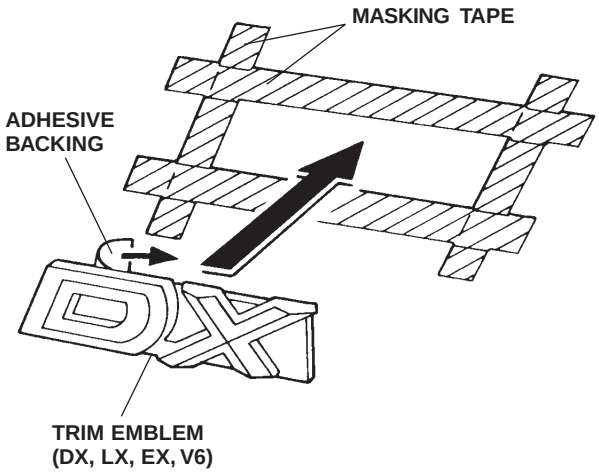

5. Remove the masking tape.

   NOTE: After the emblem is installed, tell your customer not to wash the vehicle for 24 hours to give the adhesive time to "cure."

1998 American Honda Motor Co., Inc - All Rights Reserved.